



# Selenio™ Broadcast Network Processor Quickstart for BNP 2xr+


## 1 Prepare

Supplies listed in the following table are required for this installation.


Provided in your shipping carton	You provide
BNP chassis with installed modules.	Phillips screwdriver
AC power cord, for AC system, or DC connector cables, for DC system.	Eight rack-mount screws.
Front and rear rack-mount brackets.	Ethernet cable: for connectivity between the BNP and the Management workstation.
One M4 grounding nut.	One or more GigE copper or optical SFP modules.

## 2 Rackmount the BNP 2xr+

1. Use the rack-mount screws to attach the front rack-mount bracket to one side of the chassis. Repeat on the other side of the chassis.
2. Secure the front of the chassis to the rack.
3. Slide the mounting brackets to the correct distance and secure them.
4. Seat the chassis on the rear mounting shelf.
5. Ground the chassis.

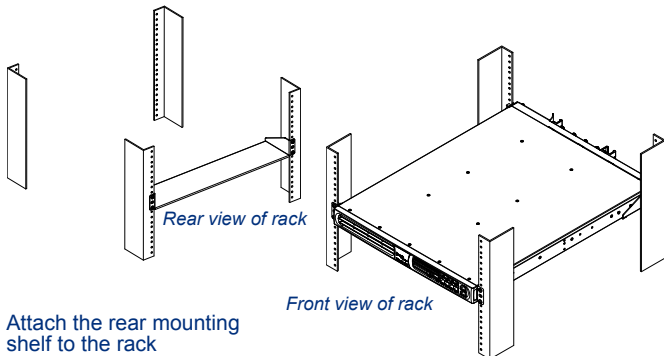

The BNP 2xr+ can be used with one to four modules, depending on your requirements. In the following illustration, the BNP 2xr+ is populated with (max) 3 PROC3s, and 1 ASI card.

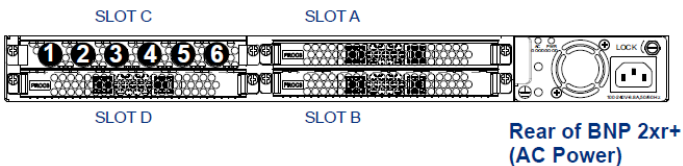

## 3 Recommended SFPs

Install approved SFPs according to the manufacturer's instructions.


Manufacturer	Part Number	Description
Finisar	FTLF1519P1BCL	SFP 1550nm GigE optical module <sup>a</sup>
Finisar	FCMJ-8521-3	1000BaseT Copper SFP Transceiver
Avago	ABCU-5710RZ	SFP 1550nm GigE optical module
Fiberdyne	FGE-SFP-T	1000BaseT Copper SFP Transceiver

a. These are some of the units being qualified; *Imagine Communications* continues to qualify units to the specification. Please contact *Imagine Communications* for an update on current SFPs.

## 4 Connect the Ports

Use the correct cable for the port type and your network configuration:


- 10/100BaseT Ethernet port, used to communicate with the management network.
- ASI ports, located on the rear of the chassis. Use a push/twisting motion to ensure proper seating of the cables.
- The Gigabit Ethernet ports must have approved SFPs before cabling.

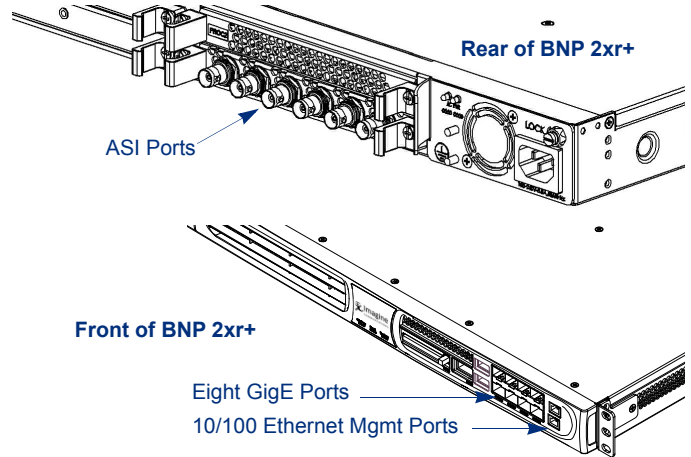

## 5 Power Up

1. Connect all ports before applying power.
2. Connect power to the chassis:
  - **For AC power**, plug one end of the AC power cable into the BNP 2xr+ power connector. Plug the other end of the power cable into the input power source. The unit should now have power.
  - **For DC power**, cut the DC onnector cables to the correct length to reach the BNP 2xr+ from the power source, and attach the connector cables from the power source to the BNP 2xr+ power connectors. Attach the other end of the power connector cables into the input power source. Toggle the external circuit breaker to the ON position. The unit should now have power.
3. Verify power: at the BNP 2xr+, check to ensure that the Cfg/Pwr LED is solid green.

**Note:** If it is necessary to swap out the power supply, you must first power down the BNP 2xr+, allow the fans to stop spinning, then replace the power supply.

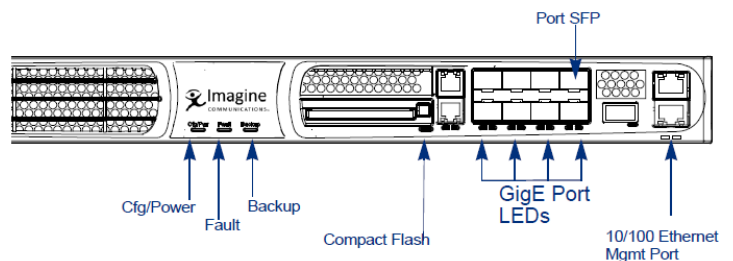

## 6 Launch the BNP 2xr+ Element Manager

1. Open a browser session on the management workstation.  
**NOTE:** When accessing the BNP 2xr+ for the first time, the address of the computer being used to access the BNP 2xr+ must be on the same subnet as the BNP 2xr+.
2. Enter the IP address of the BNP 2xr+ into the browser's address field (Default IP address: 10.1.1.1).

Click **Launch BNP Element Manager**.


- If necessary and when prompted, install the correct Java JDK/JRE VERSION (5.0 or higher).
- At the **Login** dialog, select a user account and enter the password.  
Default login: *Administrator*.  
Default password: *Admin*.

## 7 Go to Configuration > Global




- Set global BNP parameters, then click **Apply Configuration**.

## 8 Go to Configuration > Ethernet Control Port

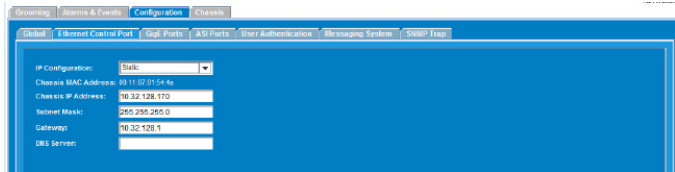

- Set Ethernet control port parameters, then click **Apply Configuration**.


## 9 Go to Configuration > GigE Ports

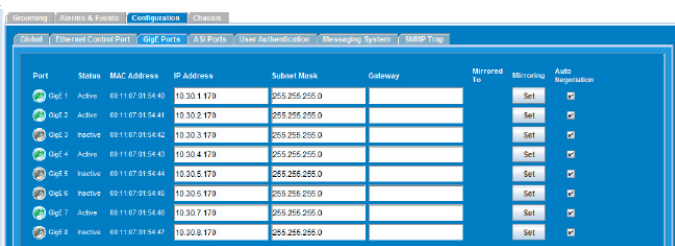

Port	Status	MAC Address	IP Address	Subnet Mask	Gateway	Mirrored To	Mirroring	Auto Negotiation
GigE 1	Active	08:11:07:01:54:40	10.30.1.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 2	Active	08:11:07:01:54:41	10.30.2.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 3	Inactive	08:11:07:01:54:42	10.30.3.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 4	Active	08:11:07:01:54:43	10.30.4.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 5	Inactive	08:11:07:01:54:44	10.30.5.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 6	Inactive	08:11:07:01:54:45	10.30.6.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 7	Active	08:11:07:01:54:46	10.30.7.179	255.255.255.0			Set	<input checked="" type="checkbox"/>
GigE 8	Inactive	08:11:07:01:54:47	10.30.8.179	255.255.255.0			Set	<input checked="" type="checkbox"/>

- For each applicable GigE port: enable and set the IP address, subnet, and gateway, then click **Apply Configuration**.

## 10 Go to Configuration > ASI Ports

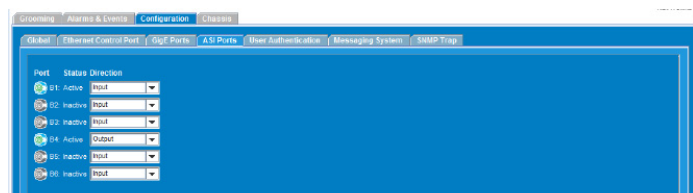


Port	Status	Direction	Mirroring
ASI 1	Active	Input	<input checked="" type="checkbox"/>
ASI 2	Inactive	Input	<input checked="" type="checkbox"/>
ASI 3	Inactive	Input	<input checked="" type="checkbox"/>
ASI 4	Active	Output	<input checked="" type="checkbox"/>
ASI 5	Inactive	Input	<input checked="" type="checkbox"/>
ASI 6	Inactive	Input	<input checked="" type="checkbox"/>


- For each applicable ASI port: select a data flow direction, then click **Apply Configuration**.

## 11 Go to Grooming > Mapping

1. At the **Inputs** panel, right-click on a port and select **Create Transport Stream** from the popup menu.

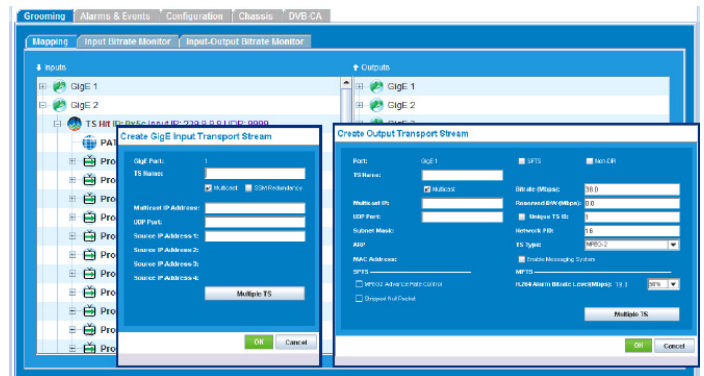

2. At the **Create GigE Transport Stream** dialog, set input stream parameters, then click **OK**.
3. At the **Outputs** panel, right-click on a port and select **Create Transport Stream** from the popup menu.
4. At the **Create Output Transport Stream** dialog, set output stream parameters, then click **OK**.
5. Create a new Output Program using either of the following methods:
  - Right-click on a specific Output TS and select **Create Program**, or
  - Groom a program: drag an existing program from a specific transport stream of the **Inputs** panel to a specific transport stream on the **Outputs** panel.

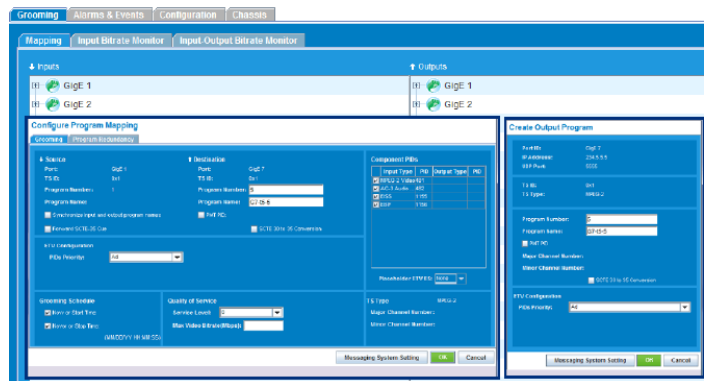

For more details, refer to the **Selenio™ BNP Element Manager User Guide**.

Imagine Communications, Inc.  
[www.ImagineCommunications.com](http://www.ImagineCommunications.com)

Copyright 2005-2016  
Imagine Communications, Inc.  
All Rights Reserved  
250-0376-01 Rev A Quickstart Guide  
BNP 2xr+, printed 2/20/16

